

★ SUPERCHARGE[®]

BATTERIES

MORE POWER. LONGER LIFE



BRT-12

CONFIGURATION TOOL


SUITE INSTALL GUIDE

BATTERY REPLACEMENT SIMPLIFIED

DOWNLOAD BRT-12 PC SUITE


Follow this procedure to download the latest PC Suite from www.supercharge.com.au/resources/accessories/.

01

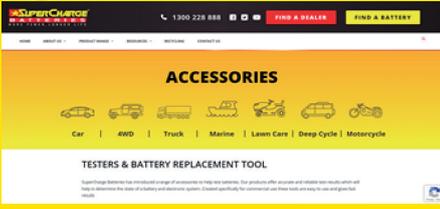

Locate the Supercharge Batteries Diagnostic Tool section of the website.

02

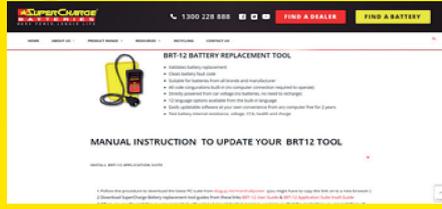


Follow the instructions to download the PC Suite.

BRT-12 PC SUITE INSTALLATION


Follow this procedure if you are installing the BRT-12 PC Suite for the first time.

01

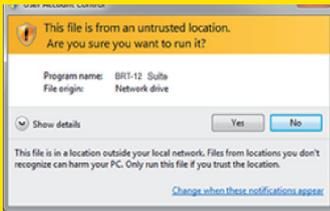


- The installer will request permission to install the suite.
- Ensure that you have Administrator rights on the PC before continuing.

02

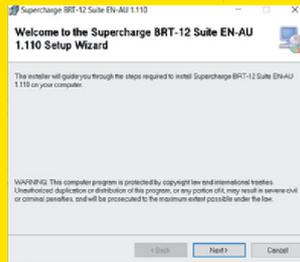


After you have run the BRT-12 PC Suite application, the 'Welcome to the Supercharge BRT-12 Suite' will be displayed, select 'Next'.

03

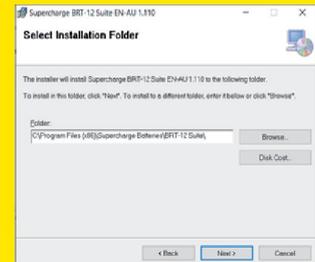


The 'Select installation Folder' screen will appear accept the folder if appropriate and select 'Next'.

04

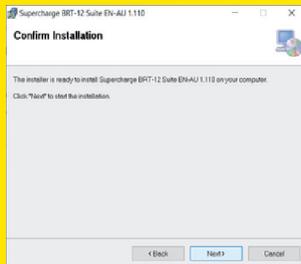


When the 'Confirm Installation' screen appears select 'Next'.

05

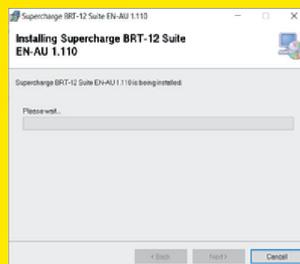

Once the software has been successfully installed select 'Next'


06

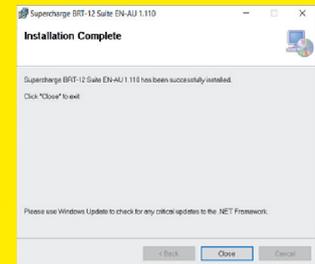

You will see the screen 'Installation Complete' that confirms that the installation was successful, select 'Close'


REGISTERING THE SUPERCHARGE BATTERIES BRT-12

01

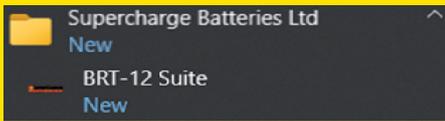

Run the BRT-12 PC Suite Application from the start menu, select 'Start' – 'Programs' – 'Supercharge Batteries Ltd' – 'BRT-12 Suite'. (There will also be an icon installed onto your desktop).

02

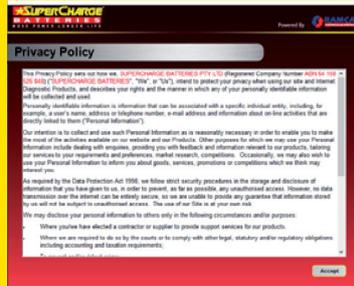

Read the Privacy Policy and accept before continuing.

03



Connect the USB supplied to the BRT-12 and then to a USB port on the PC.

04



When you press the 'Next' button, the BRT-12 will be detected by the BRT-12 PC Suite.

05



The Suite will then check the internet connection is present. If you experience problems at this point you will be directed to the Tests & Checks section of the BRT-12 PC Suite.

06



Complete the 'Product Registration' ensuring you complete all sections marked with a '*'. Once complete press the 'Next' button.

07



After a successful registration, a confirmation page will be displayed. Make a note of these details for future reference.

UPDATING THE SUPERCHARGE BATTERIES BRT-12

01




Select the option 'Get Updates'.

02



Connect the USB supplied to the BRT-12 and then to a USB port on the PC.

03

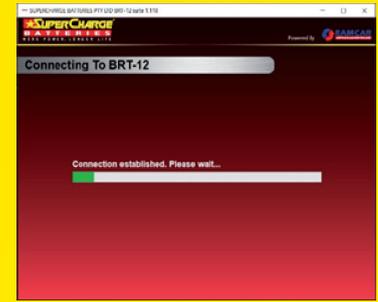


When you press the 'Next' button, the BRT-12 will be detected by the BRT-12 PC Suite.

04



The Suite will then check the internet connection is present. If you experience problems at this point you will be directed to the Tests & Checks section of the BRT-12 PC Suite.

05

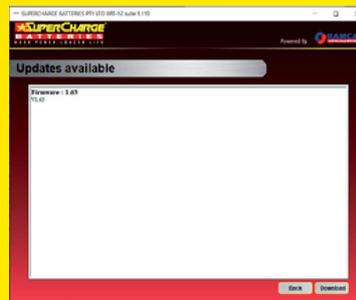

Follow the on screen instructions to update your tool to the latest version. A description of the updates will also be shown on screen.

APPLICATIONS VIEWER

01




Select 'Applications Viewer'

02



The Suite will then check the internet connection is present.

03

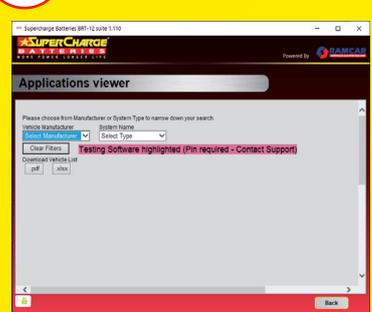

The Applications Viewer can be used to identify whether a vehicle is supported by the BRT-12.

USING THE APPLICATION STORE

01




It is possible to renew the subscription for the Supercharge Batteries BRT-12 through the application store in the BRT-12 PC Suite. To do this, select 'Application Store'.

02




Connect the USB supplied to the BRT-12 and then to a USB port on the PC.

03

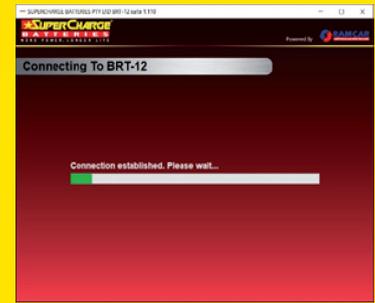

When you press the 'Next' button, the BRT-12 will be detected by the BRT-12 PC Suite.

04

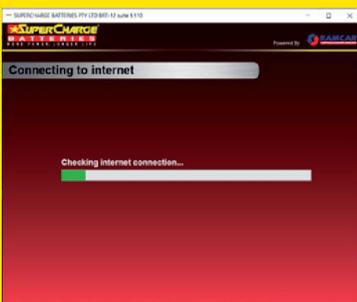


The Suite will then check the internet connection is present. If you experience problems at this point you will be directed to the Tests & Checks section of the BRT-12 PC Suite.

05



The following page should be displayed. Select 'Renew'.

06

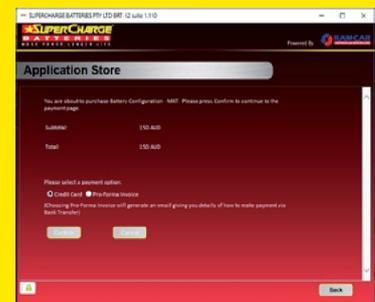

Select 'Confirm'.

07




You will be directed to the payment page. Select the type of card you will be making the payment with.

08



Enter your details as required, then select 'Make Payment'.

09

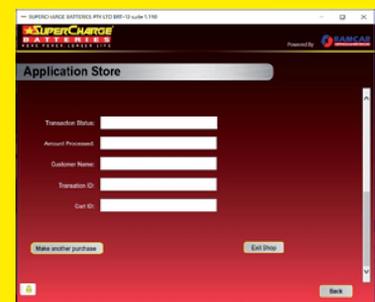

You will be directed to the payment confirmation screen.

OPTIONS & HELP

01



Select 'Options & Help' from the menu.

02



If you are advised to change your subscription number & postcode you can do this from here.

03



Selecting the 'Tests and Checks' button allows you to perform tests to verify that your Supercharge Batteries BRT-12 is functioning correctly and also verifies that you are able to connect to the website and download the latest software.

04



You will be asked to perform these tests if you experience problems and need to contact a customer services representative or engineer. This information is also reported back to the website in order for the engineer to assist you in resolving your problem.

05



Selecting the 'Supercharge Batteries re-install' button allows you to force the Supercharge Batteries BRT-12 to download your latest update again. This can be used if you think there is a problem with your last update.

06



Connect your BRT-12 as per the instructions within the Supercharge Batteries PC suite. Connect mini-USB to Supercharge Batteries BRT-12 and USB to PC. Refer to the 'Updating the Supercharge Batteries BRT-12' section for more information.

